


S9

S11

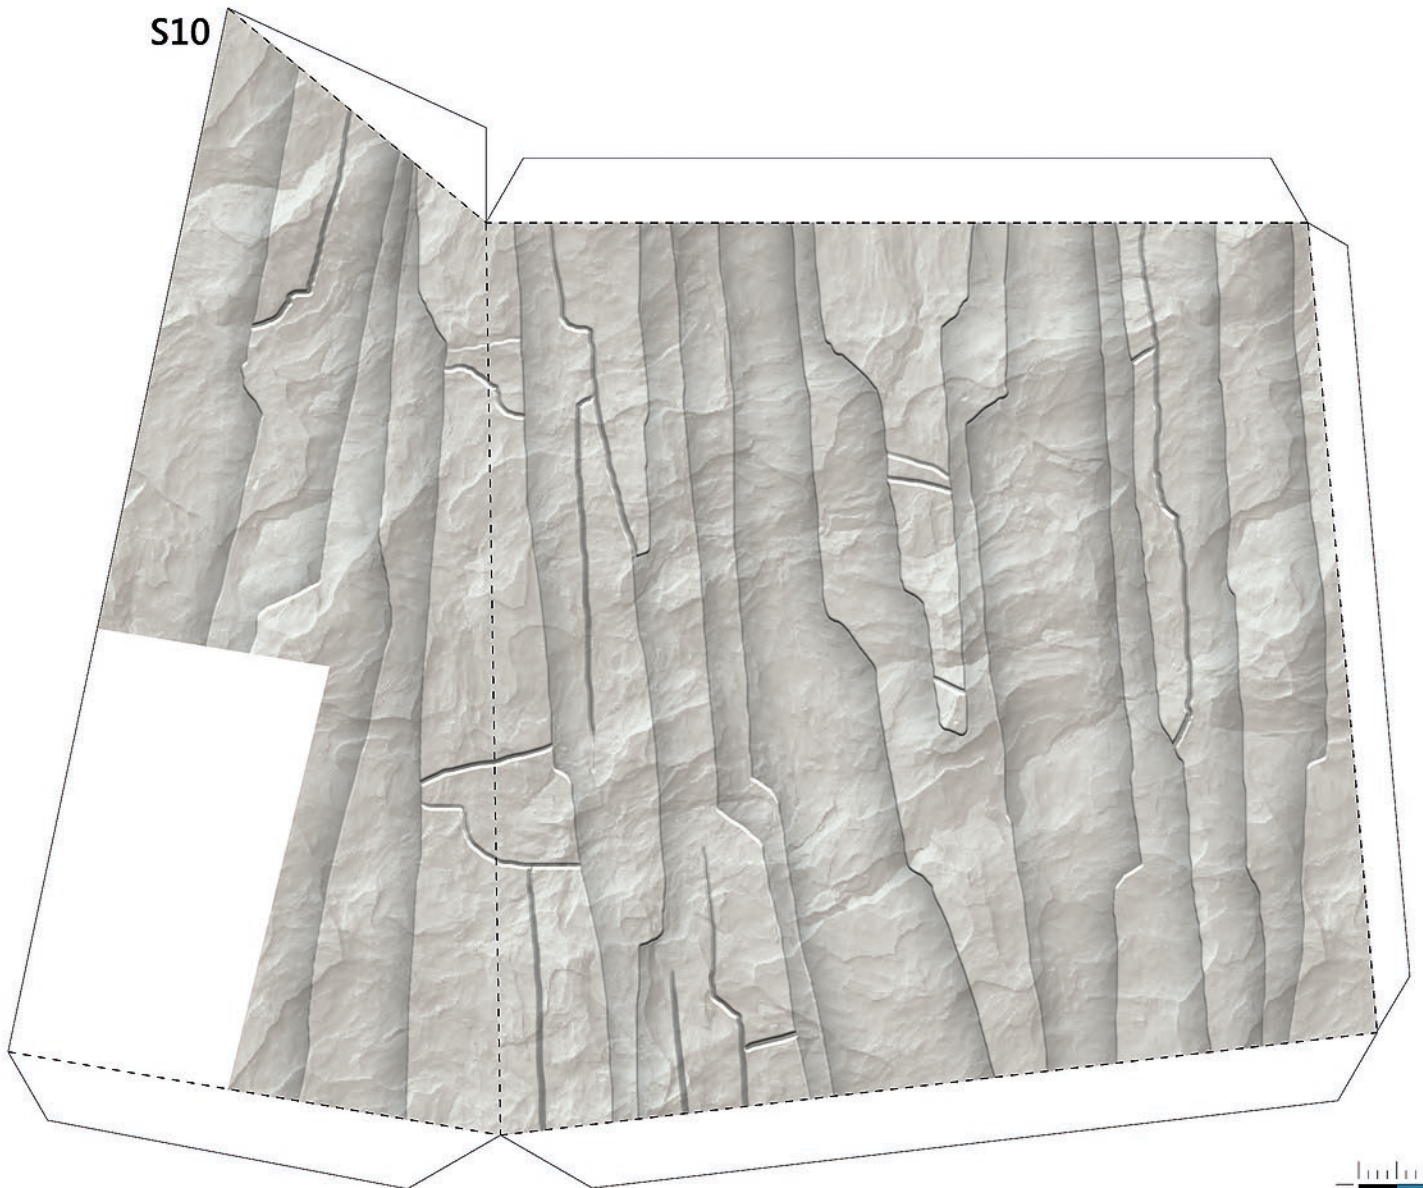





C1-W



C2-W



C2-W




F4-W



H4-W




C2-W

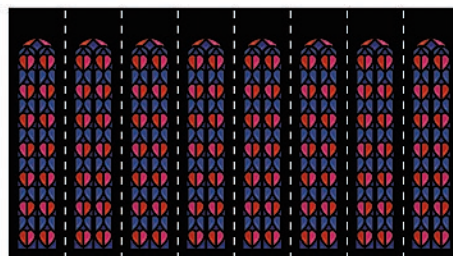


O25-W



G10-W

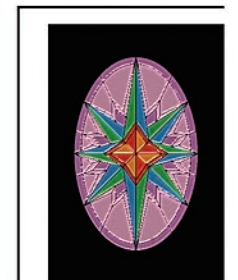

B17-W

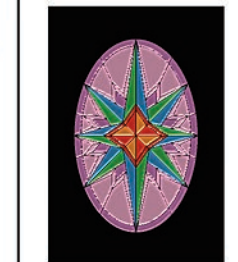

B17-W



D2-W



H4-W



D2-W



C3-W



V14-W



N4-W



V14-W



J3-W



J3-W



E11-W




F3-W



A38-W



E3-W



B58-W

Print this sheet onto a transparency or vellum for internal lighting effects. If printing on vellum, make two prints, and double the images for the best color saturation. If printing on a transparency, cover the backside with tissue paper, tracing paper, or vellum to disperse the internal light for an even glow. Cut out the standard windows from the model parts, and replace them with these transparent versions.

